


PRAESIDIO®

Touchless dispenser for hand disinfection, stainless steel, 1000 ml, lockable, for wall mounting or free-standing on stand

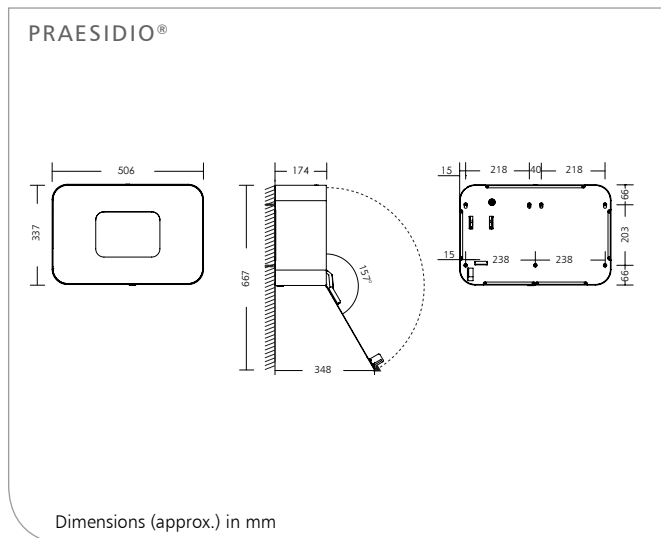

**Product characteristics**

- ▶ Dispenser for dosing of low viscosity hand disinfectants
- ▶ For 1000 ml standard Euro bottles
- ▶ High-quality and robust stainless steel housing
- ▶ Lockable
- ▶ For wall mounting or free-standing on stand
- ▶ Hygienic spray chamber
- ▶ Integrated drip tray, large capacity, easy to clean
- ▶ Intuitive operation with touchless proximity sensor
- ▶ Innovative spray function without fogging
- ▶ Adjustable dosing quantity in 4 steps from approx. 0.75 ml to 1.5 ml
- ▶ Fill level window
- ▶ Optional with bluetooth door contact system (Art. No. 3401432) for door opening during dispenser activation
- ▶ Hygienically smooth and easy to wipe off surfaces
- ▶ Incl. mounting kit for four-point wall mounting
- ▶ With fire protection sensor

**Interesting information**

References: ▶ Conference centres, exhibitions, airports, train stations, restaurants, retirement/care homes, hospitals, laboratories, commercial kitchen, food processing areas, shopping centres, hotels, schools, kindergardens, sports centres, administration facilities

Application examples: ▶ Passage areas, entrance areas, washrooms, baths, care and examination rooms, kitchens

**Technical data**

Housing:	Stainless steel AISI 304, brushed
Door/Front:	Stainless steel AISI 304, powder coated white (RAL 9016)
Window:	Plastic, clear
Dosing pump:	For disinfectant: stainless steel, adjustable dosage (approx. 0.75/ 1.0/ 1.25/ 1.5 ml/stroke)
Batteries:	5 Alkaline D-cell batteries (Typ D)
Lock:	Stainless steel
Mounting:	Wall mounting with 4 screws and wall plugs or free-standing on stand (Art. No. 1421051)

**Description for tender - see overleaf**

PRAESIDIO®/EN/1220/1.2



Subject to technical modifications.  
Tests are required before new filling materials are used!



**OPHARDT HYGIENE-TECHNIK GmbH + Co. KG**  
Lindenau 27 | 47661 Issum | Germany  
Tel.: +49 (0) 28 35 18-10 | Fax +49 (0) 28 35 18-77  
planer@ophardt.com | www.ophardt.com

# PRAESIDIO®

Touchless dispenser for hand disinfection, stainless steel,  
1000 ml, lockable, for wall mounting or free-standing on stand

## Description for tender

... Pcs. **PRAESIDIO®** **Art. No. 3401073**  
Touchless hand disinfectant dispenser for alcohol-based disinfectant, 1000 ml, stainless steel, brushed, white powder coated door/front (RAL 9016), autoclavable stainless steel pump with shower head, adjustable dosage (approx. 0.75/ 1.0/ 1.25/ 1.5 ml/stroke), spray chamber, integrated drip tray, incl. HDPE-bottle and 5 Alkaline D-cell batteries  
Dimensions: W 506 x H 337 x D 174 mm

... Pcs. **PRAESIDIO® with print „HÄNDEDESINFEKTION“** **Art. No. 1422021**  
Touchless hand disinfectant dispenser for alcohol-based disinfectant, 1000 ml, stainless steel, brushed, white powder coated door/front (RAL 9016), with print „HÄNDEDESINFEKTION“, autoclavable stainless steel pump with shower head, adjustable dosage (approx. 0.75/ 1.0/ 1.25/ 1.5 ml/stroke), spray chamber, integrated drip tray, incl. HDPE-bottle and 5 Alkaline D-cell batteries  
Dimensions: W 506 x H 337 x D 174 mm

... Pcs. **PRAESIDIO® with print „HAND DISINFECTION“** **Art. No. 3401302**  
Touchless hand disinfectant dispenser for alcohol-based disinfectant, 1000 ml, stainless steel, brushed, white powder coated door/front (RAL 9016), with print „HAND DISINFECTION“, autoclavable stainless steel pump with shower head, adjustable dosage (approx. 0.75/ 1.0/ 1.25/ 1.5 ml/stroke), spray chamber, integrated drip tray, incl. HDPE-bottle and 5 Alkaline D-cell batteries  
Dimensions: W 506 x H 337 x D 174 mm

Product: **PRAESIDIO®**  
Manufacturer: OPHARDT HYGIENE-TECHNIK GmbH + Co. KG

## Compatible accessoires

- ▶ Praesidio® Stand, adjustable height in 5 stages from 86 to 120 cm, Art. No. 1421051
- ▶ Praesidio® Stand AFP, adjustable height in 5 stages from 86 to 120 cm, Art. No. 1423017
- ▶ Praesidio® Power supply, Input AC 100-240 V-0,35 A, Art. No. 4401040
- ▶ Praesidio® BT-G3, Input AC 100-240 V-0,35 A, Art. No. 3401432