


## ingo-man® SmartNose E

Smart face shield that can be retrofitted into ingo-man® plus soap and disinfectant dispenser for 500 ml Euro bottles, for fully automatic and continuous monitoring of the hand hygiene compliance



### ingo-man® SmartNose E

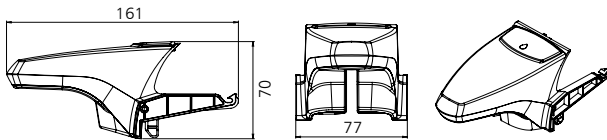

Dimensions (approx.) in mm

### Product characteristics

- ▶ Face shield: intelligent retrofit module
- ▶ For manual ingo-man® plus dispensers with 500 ml Euro bottles
- ▶ Simple installation in a few seconds
- ▶ Optimized for connection to the OPHARDT Hygiene Monitoring System® (OHMS) to analyse hand hygiene compliance
- ▶ With integrated Feedback-LED: gives immediate feedback when the required dosage has been dispensed (standard: 3 ml)
- ▶ With integrated „Low-Battery-Level“-LED: indicates when approx. 10% of the capacity is still available
- ▶ Robust plastic body

### Interesting information

References:


- ▶ Hospitals, clinics, doctors' practices, medical facilities, hygiene-sensitive areas

Application examples:

- ▶ Intensive care units, general wards, surgery, entrance areas, nursing rooms, toilets, WC rooms, sanitary rooms

### Technical data

Housing:	Plastic: ABS (Acrylonitrile butadiene styrene), Polycarbonate
Inner component:	Board with sensors and WiFi module 802.11 b/g (WPA and WPA2)
Firmware:	Comfortable updates "over-the-air" (OTA)
Installation:	Remove conventional face shield and insert ingo-man® SmartNose with corresponding magnetic module (please scan QR Code to watch the installation video)
Battery:	Lithium battery ER26500 (Transport Code: 3091; Hazardous material class: 9), 3.6 V, 9.0 Ah, exchangeable, non-rechargeable, confected battery with cable and plug can be reordered

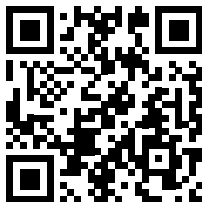

Installation video

Subject to technical modifications.



OPHARDT HYGIENE-TECHNIK GmbH + Co. KG  
Lindenau 27 | 47661 Issum | Germany  
Tel.: +49 (0) 28 35 18-10 | Fax +49 (0) 28 35 18-77  
planer@ophardt.com | www.ophardt.com

### Description for tender

**ingo-man® SmartNose E** **Art. No. 4402674**

... Pcs.

intelligent face shield can be retrofitted into existing ingo-man® plus soap and disinfectant dispensers, for manual 500 ml dispensers, optimized for connection to the OPHARDT Hygiene Monitoring System® (OHMS), for fully-automatic and continuous monitoring of the hand hygiene compliance, fast and simple installation, integrated Feedback-LED for immediate feedback when the required dosage has been dispensed, integrated „Low-Battery-Level“-LED indicates when approx. 10% of the capacity is still available  
Dimensions: W 77 x H 70 x D 161 mm

Product:

**ingo-man® smart**

Manufacturer:

OPHARDT HYGIENE-TECHNIK GmbH + Co. KG