

UDU 11 T E/S ST (SFTS)

Refillable touchless liquid soap dispenser (1200 ml) made of stainless steel with Smart From the Start technology

Art. No. 1425064




OPHARDT HYGIENE-TECHNIK GmbH

Lindenau 27 | 47661 Issum | Germany

Tel.: +49 (0) 28 35 18-10 | Fax: +49 (0) 28 35 18-77

planer@ophardt.com | www.ophardt.com

UDU 11 X10 Touchless

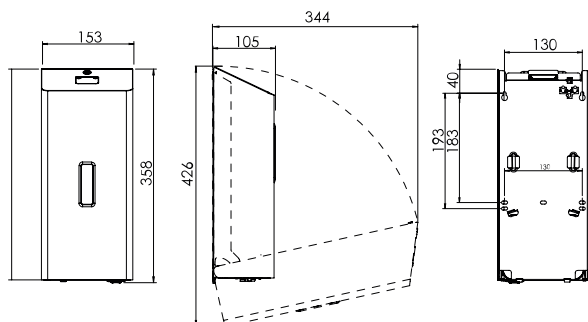

Maße in mm - Dimensions in mm



References

airports, train stations, schools, kindergardens, hotels, restaurants, commercial kitchen, food processing areas, prisons, exhibitions, conference centres, shopping centres, fitness and sports centres, industry, laboratories, administration facilities

Usage examples

washrooms, toilets, baths, nursing and examination rooms, kitchens, production facilities, entrance area

Technical data

Dispenser type:	refillable dispenser
Housing:	Stainless steel, brushed with Anti-Fingerprint-Coating (Steel Touch)
Back plate:	Stainless steel
Filling volume (ml):	1200 ml
Dosing pump:	long-life plastic soap pump
Dosage quantity:	0.6 / 1.0 / 1.4 ml/stroke
Filling good:	Liquid soaps (without Grit), Hand Sanitizer Gel
Operating type:	touchless
Power type:	Battery
with/without viewing window:	Clear
with drip tray:	No
Lock:	SanTRAL vandalism-proof lock, plastic
Batteries:	4x Alkaline D batteries, 1.5 V, exchangeable, non-rechargeable
Recommended Batteries:	DURACELL ULTRA POWER D, VARTA 4020 (INDUSTRIAL), VARTA 4120, VARTA 4720
Drive:	X10 system, quiet operating sound (Quiet Drive+)
Electronic:	Board with sensors, Wi-Fi module 802.11 b/g/n (Frequency range: 2400 MHz - 2483.5 MHz; WPA and WPA2) and Bluetooth LE (Frequency: 2,404 GHz - 2,480 GHz)
Firmware:	Updates and configuration "over-the-air" (OTA)
Voltage:	6 Volt
Compliance:	RoHS
CE certification:	EN 300328 Integration verification WLAN, EN 300330 Integration verification NFC, ETSI EN 62311.2008 EMF, ETSI EN 301489-1 EMV
Software:	Dispenser with integrated Smart Module enables automatic fill level detection using weight sensors and connection to KANARY as well as third-party platforms
Mounting:	Wall mounting with 4 screws and wall plugs, recommended distance to the countertop min. 20 cm
Cleaning:	manual wipe disinfection, not dishwashersafe, not autoclavable
Warranty:	5 years
Net weight:	2.648 kg
Dimensions (W x H x D) in mm:	153x358x105
Note:	Before using new products, please always check the compatibility of the product and the dispensing system to ensure proper functionality.

Compatible accessories

UDU 5/11 T drip tray

Prevents the dripping of the disinfectant off the hand onto the floor

Art. No. 1424771

Stand for UDU 5 T

Robust stand for UDU 5 T dispenser

Art. No. 1424789

Please see other accessories in our Online Product Catalogue.